

CATEGORY	EVENT ID	PARTITIAN	ZONE (Unique)	DESCRIPTION
SYSTEM TROUBLE	313	39	953 / 954	Engineering Reset (changed encryption key) No action required.
	337	39	950	Expansion Module DC Loss 3.8V DC voltage low or absent.
	350	39	953	Failed to Communicate The SafeDial Wireless unit is experienced trouble sending signals and does not expect a restore.
	352	39	955 / 956	Dialler Interface Lead Fail Issue with the dialler lead between the SafeDial Wireless unit and the Alarm Panel (4 wire interface)
	356	39	968	IP Path Poll Fail The SafeDial Wireless unit failed its poll requests via IP.
	356	39	969	Cellular Network Path Poll Fail The SafeDial Wireless unit failed its poll requests via the cellular network.
	356	39	970	SafeDial Wireless (SDW) is offline The SafeDial Wireless unit is not responding to network requests.
GENERAL ALARMS	140	39	981	Auxiliary 1 – Auxiliary input on SDW unit.
	140	39	982	Auxiliary 2 – Auxiliary input on SDW unit.
	140	39	983	Auxiliary 3 – Auxiliary input on SDW unit.

For more information and FAQ's on any of our products or services please visit us online at www.globetelecom.com.au

Phone 1300 73 73 14
Email support@globetelecom.com.au

