


Programming Setup for Texecom Premier 412 Keyswitch

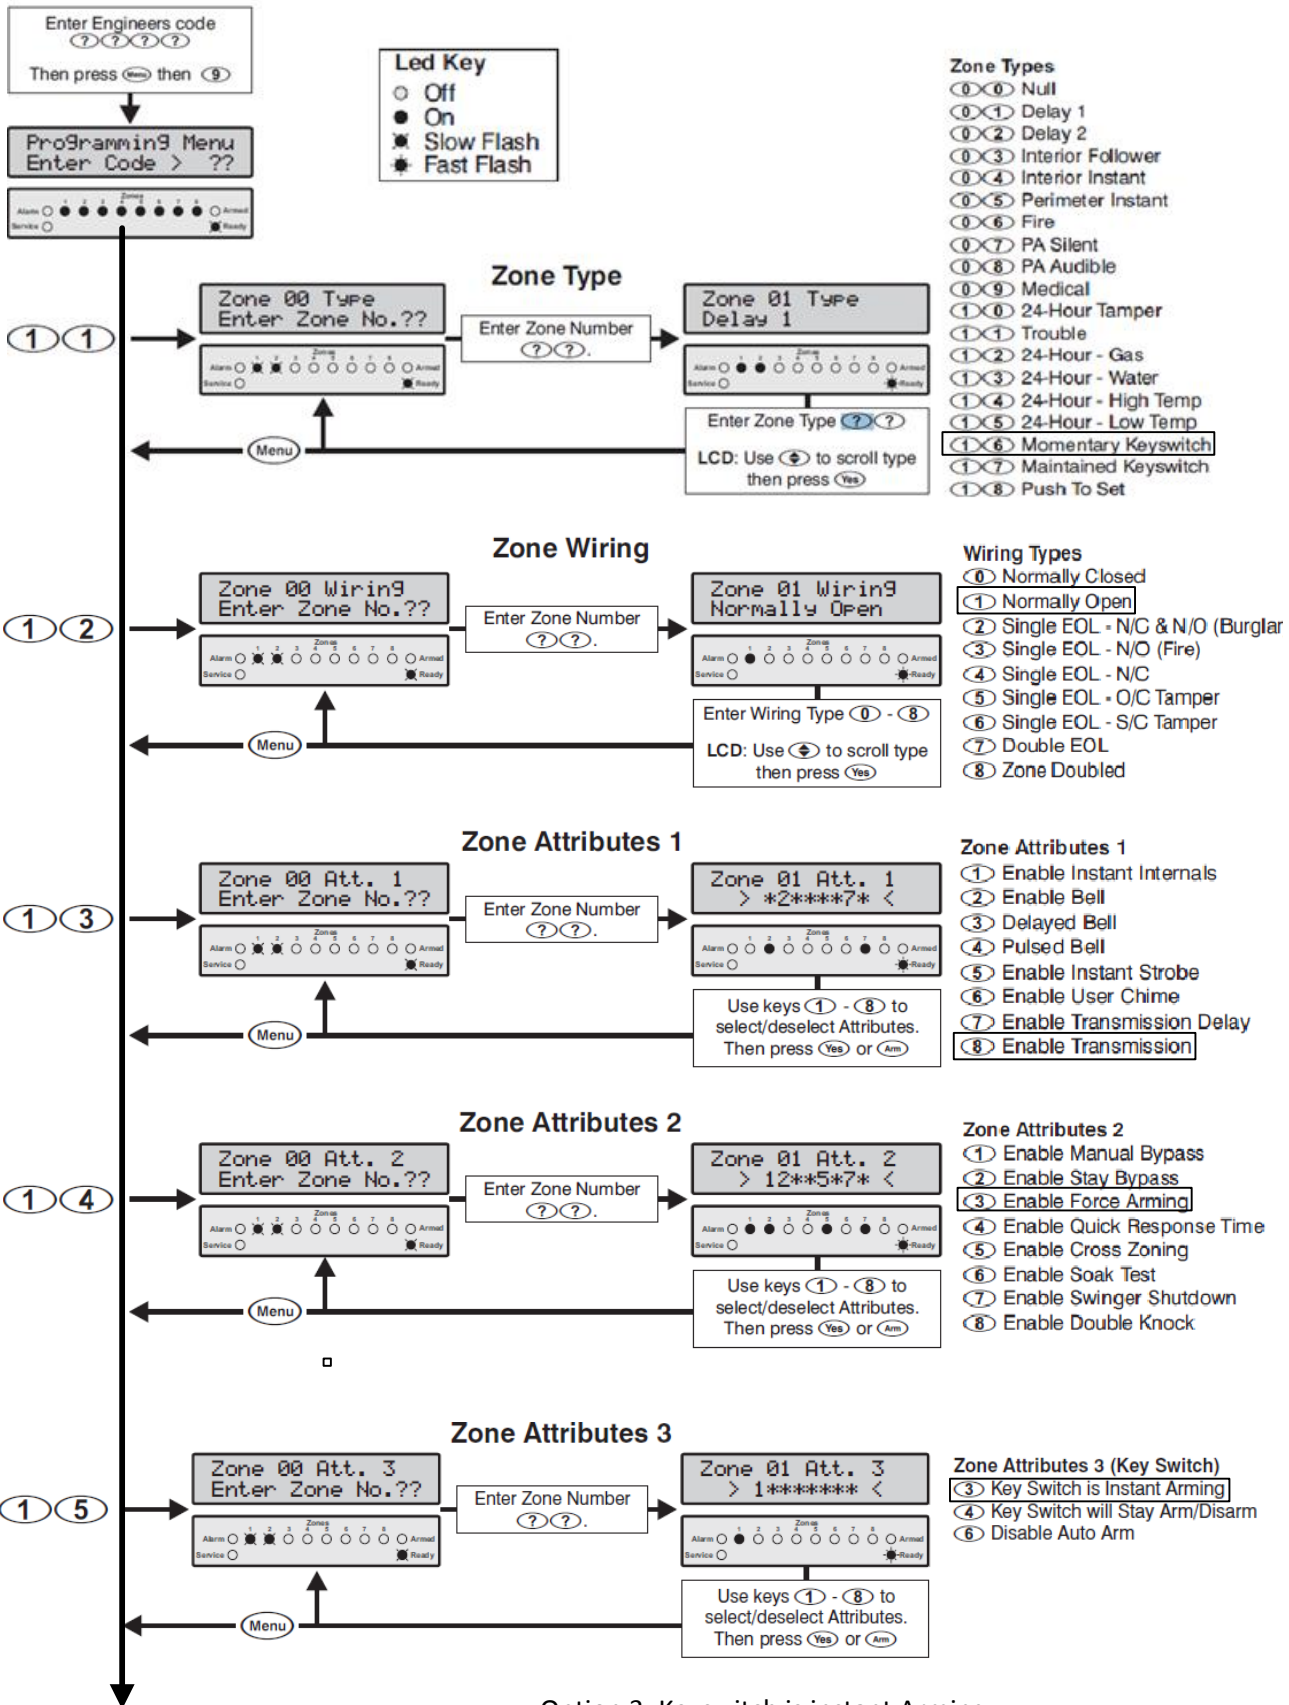

Option 3: Keyswitch is instant Arming
 Enabled = System Arms instantly, NO Delay, Report is sent immediately.
 Disabled = Exit delay, Report is sent after Exit Delay