

There is a new feature available on the Atlas Portal: Configuration of the Outputs, this feature was developed for the Control Rooms and Bureaus. This feature does not impact or change the functionality of Pocket Secure and Pocket Secure Plus App.

Configuration can be done via the 'Input/Output' tab or the 'Fleet' tab.

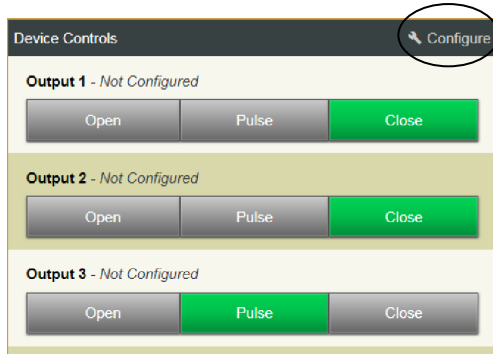


Fig. 1 Via the Input/Output tab

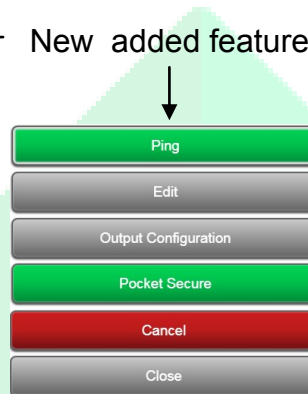


Fig. 2 Via the Fleet tab

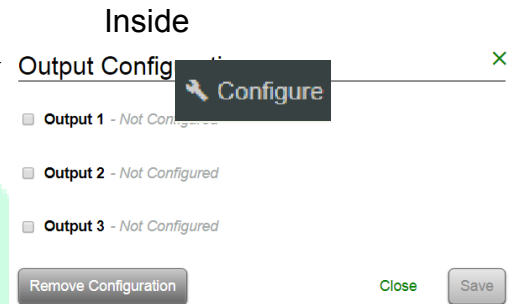


Fig. 3 Inside the Configure option

Output Configuration -

Output 1	
Label	Label
Operation:	Pulse to Arm/Disarm
Area:	Any Area

Fig. 4 Configuring the Output

Label: This appears in the Atlas. Input/Output tab

Operation: Alarm - Close Output to Arm
- Pulse to Arm/Disarm
- Pulse to Partial-Arm

Others - Close Output to Operate
- Pulse to Operate

Area configuration remain the same

Once configuration is saved the note is written to the device history

8/3/2019

09:33:14	Output configuration updated
09:32:25	Output configuration updated
09:32:06	Pulse output 1

Fig. 5 Configuration note written

Place the mouse over the Event to display the persons details who configured the output.

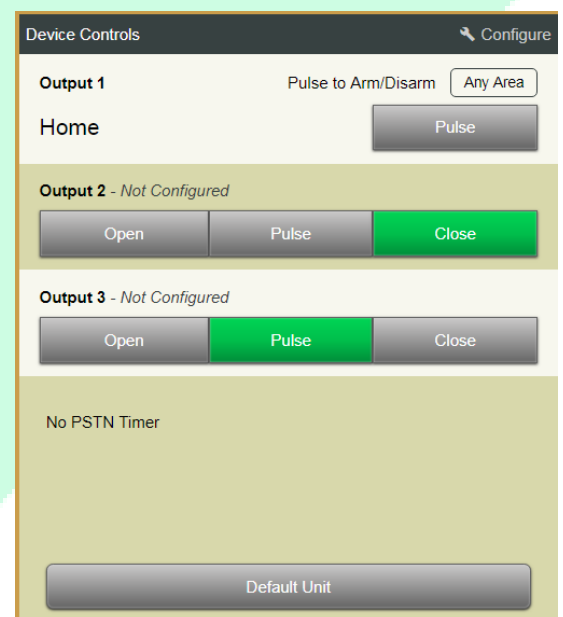


Fig. 6 Display shown in Atlas