

## Crow Power Wave 8 Alarm Panel

- ✓ **Panel Dialler wiring**
- ✓ **Panel Dialler programming**




### Background:

Permaconn communicators have a terminal block for the connection of the female 611 fly lead (supplied). If the Alarm Panel also has a terminal block for PSTN connection, we recommend you use your own cable between the Alarm Panel dialler and the Permaconn communicator. This type of installation negates the use of the female 611 fly lead, decreasing your installation time. For four (4), six (6) and eight (8) pin RJ connectors, please refer to manufactures wiring diagram.

There are five (5) minimum requirements from the Alarm panel for successful communication:

- 1) Must have an eight (8) digit primary phone. E.g. 12345678.
- 2) A four (4) digit account number.
- 3) Must be Contact ID format.
- 4) Must be set for tone (DTMF) dialling.
- 5) Open / Close reporting, must be enabled for Pocket Secure App.

### Dialler Lead wiring between Permaconn and Crow Power Wave 8 Alarm Panel:

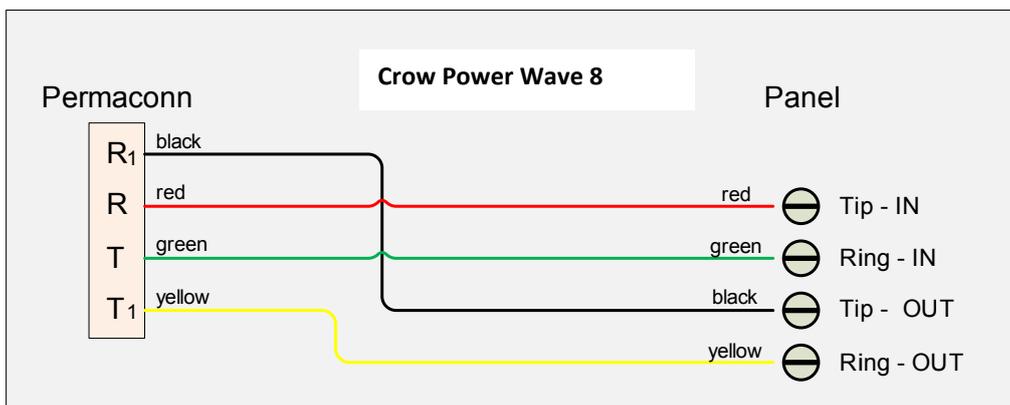

### Programming the Crow Power Wave 8 Alarm Panel for dialler operation:

Description	Location	Default
Enable Dialler	185 Option 1	Off = No dialler (default) On = Yes
Message format	241 Option 1	1 = Contact ID (Default)
Account 1	506 Area A	0000
Account 2	507 Area B	0000
Phone number 1	501 Phone 1	Value 1 – 16 digits
Open/Close Report	188 Option 1	Off = No Report On = Report enabled (Default) (Pocket Secure App)