

## Crow Power Wave Elite 64 Alarm Panel



PERMACONN™

- ✓ **Panel Dialler wiring**
- ✓ **Panel Dialler programming**

### Background:

Permaconn communicators have a terminal block for the connection of the female 611 fly lead (supplied). If the Alarm Panel also has a terminal block for PSTN connection, we recommend you use your own cable between the Alarm Panel dialler and the Permaconn communicator. This type of installation negates the use of the female 611 fly lead, decreasing your installation time. For four (4), six (6) and eight (8) pin RJ connectors, please refer to manufactures wiring diagram.

There are five (5) minimum requirements from the Alarm panel for successful communication:

- 1) Must have an eight (8) digit primary phone. E.g. 12345678.
- 2) A four (4) digit account number.
- 3) Must be Contact ID format.
- 4) Must be set for tone (DTMF) dialling.
- 5) Open / Close reporting, must be enabled for Pocket Secure App.

### Dialler Lead wiring between Permaconn and Crow Power Wave Elite 64 Alarm Panel:



### Programming the Crow Power Wave Elite 64 Alarm Panel for dialler operation:

Description	Location	Default
Dialler Options	P370E Option 1 = Dialler On Option 4 = DTMF (On) or Pulse (Off)	On = Yes, Off = No dialler (default) On = Yes(default), Off = Pulse
Message format Phone 1	P387E Option 1	1 = Contact ID (Default)
Account A	P428E Area A	0000
Account B	P528E Area B	0000
Account C	P628E Area C	0000
Account D	P728E Area D	0000
Phone number 1	P381E Phone 1	Value 1 – 16 digits
Area Reporting Options	427 option 1 Open/Close Report Area A 527 option 1 Open/Close Report Area B 627 option 1 Open/Close Report Area C 727 option 1 Open/Close Report Area D (Pocket Secure App)	Off = No Report (Default) On = Report enabled