- ✓ Panel Dialler wiring
- Panel Dialler programming


## Background:

Permaconn communicators have a terminal block for the connection of the female 611 fly lead (supplied). If the Alarm Panel also has a terminal block for PSTN connection, we recommend you use your own cable between the Alarm Panel dialler and the Permaconn communicator. This type of installation negates the use of the female 611 fly lead, decreasing your installation time. For four (4), six (6) and eight (8) pin RJ connectors, please refer to manufactures wiring diagram.

There are five (5) minimum requirements from the Alarm panel for successful communication:

- 1) Must have an eight (8) digit primary phone. E.g. 12345678.
- 2) A four (4) digit account number.
- 3) Must be Contact ID format.
- 4) Must be set for tone (DTMF) dialling.
- 5) Open / Close reporting, must be enabled for Pocket Secure App.

## Dialler Lead wiring between Permaconn and DSC PC 1565 Alarm Panel:

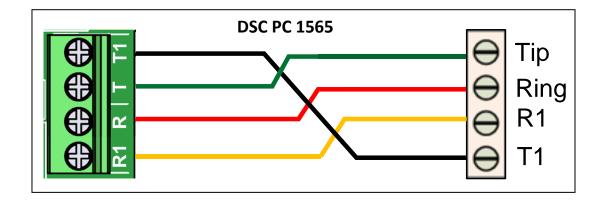

## Programming the DSC PC 1565 Alarm Panel for dialler operation:

Description	Location	Notes
Communication options 1	380	
	Option 1 = Enable dialler	Zone 1 led should be On
	Option $3 = DTMF$	Zone 3 led should be Off
	Option 4 = Switch to Pulse	Zone 4 led should be Off
Message format	360	Enter 0 3 0 3
Phone 1	03 = DTMF Contact ID	
System Account	310	E.g. 2090
	0 = A (*1*)	2 *1* 9 *1*
Phone number 1	301	E.g. Phone Number Entry
	Enter F (*6) End of number	1-2-3-4-5-6-7-8-*6
Opening / Closing Reports	365	Led zone 1 should be on
Routing	Option 1 = Phone 1	

