

DSC PC550 Alarm Panel



- ✓ **Panel Dialler wiring**
- ✓ **Panel Dialler programming**


Background:

Permaconn communicators have a terminal block for the connection of the female 611 fly lead (supplied). If the Alarm Panel also has a terminal block for PSTN connection, we recommend you use your own cable between the Alarm Panel dialler and the Permaconn communicator. This type of installation negates the use of the female 611 fly lead, decreasing your installation time. For four (4), six (6) and eight (8) pin RJ connectors, please refer to manufactures wiring diagram.

There are five (5) minimum requirements from the Alarm panel for successful communication:

- 1) Must have an eight (8) digit primary phone. E.g. 12345678.
- 2) A four (4) digit account number.
- 3) Must be Contact ID format.
- 4) Must be set for tone (DTMF) dialling.
- 5) Open / Close reporting, must be enabled for Pocket Secure App.

Dialler Lead wiring between Permaconn and DSC PC 550 Alarm Panel:

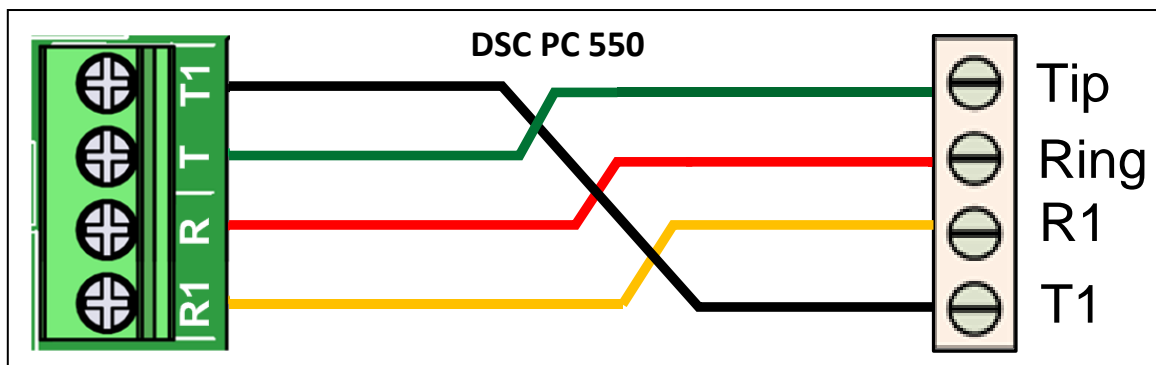

Programming the DSC PC 550 Alarm Panel for dialler operation:

Description	Location	Notes
2 nd System Option Code	06 Option 1 = Enable dialler	LED 1 should be On
Message format Phone 1	360 03 = DTMF Contact ID	Enter 0 3 0 3
System Account	08 0 = A (*1*)	E.g. 2090 2 *1* 9 *1*
Phone number 1	07 Enter # End of number	E.g. Phone Number Entry 1-2-3-4-5-6-7-8-#
Opening / Closing Reports	10	Enter 10101010101010
Telephone Line Monitor	015 option 7	Enable/Disable