

Honeywell Advantage 5115 series Alarm Panel



- ✓ **Panel Dialler wiring**
- ✓ **Panel Dialler programming**


Background:

Permaconn communicators have a terminal block for the connection of the female 611 fly lead (supplied). If the Alarm Panel also has a terminal block for PSTN connection, we recommend you use your own cable between the Alarm Panel dialler and the Permaconn communicator. This type of installation negates the use of the female 611 fly lead, decreasing your installation time. For four (4), six (6) and eight (8) pin RJ connectors, please refer to manufactures wiring diagram.

There are five (5) minimum requirements from the Alarm panel for successful communication:

- 1) Must have an eight (8) digit primary phone. E.g. 12345678.
- 2) A four (4) digit account number.
- 3) Must be Contact ID format.
- 4) Must be set for tone (DTMF) dialling.
- 5) Open / Close reporting, must be enabled for Pocket Secure App.

Dialler Lead wiring between Permaconn and Honeywell Advantage 5115 series Alarm Panel:

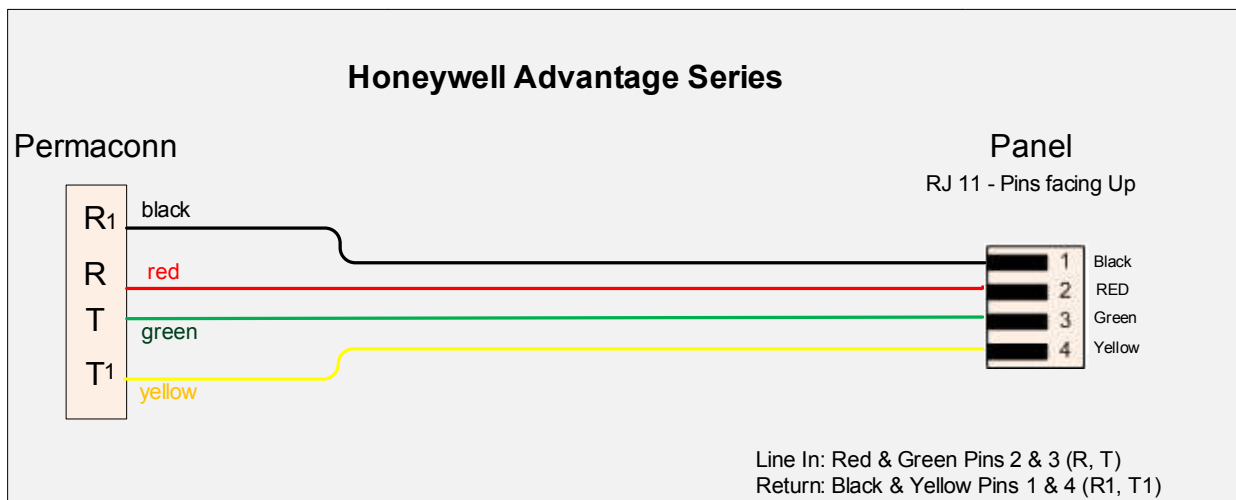



Programming the Advantage 5115 series Alarm Panel for dialler operation:

- Enter installer mode: 4 digit installer code (5115 default) + 800.
- Press *38: Must be set to 0 (Digital Communicator).
- Press *39: Must be set to 1 (DTMF/Tone dialling).
- Press *41*: This clears any entries in the PABX field.
- Press *42: Enter 8 digit primary phone number followed by the * key.
e.g. 12345678 or 55555555.
- Press *43: Enter account number, e.g. acc. 1234 enter 01020304.
- Press * 54: Primary format must be set to 1 (Contact ID).
- Press * 57: Dual reporting must be set to 0.
- Press * 63: Alarm Count must be set to 00
- Press * 99 to exit program mode.
- Trigger a test report: 4 digit installer code (5115 default) + 5.
- Disarm system when finished: 4 digit installer code (5115 default) + 1.