

## Honeywell Vista 250BPT Alarm Panel



- ✓ **Panel Dialler wiring**
- ✓ **Panel Dialler programming**


### **Background:**

Permaconn communicators have a terminal block for the connection of the female 611 fly lead (supplied). If the Alarm Panel also has a terminal block for PSTN connection, we recommend you use your own cable between the Alarm Panel dialler and the Permaconn communicator. This type of installation negates the use of the female 611 fly lead, decreasing your installation time. For four (4), six (6) and eight (8) pin RJ connectors, please refer to manufactures wiring diagram.

There are five (5) minimum requirements from the Alarm panel for successful communication:

- 1) Must have an eight (8) digit primary phone. E.g. 12345678.
- 2) A four (4) digit account number.
- 3) Must be Contact ID format.
- 4) Must be set for tone (DTMF) dialling.
- 5) Open / Close reporting, must be enabled for Pocket Secure App.

### **Dialler Lead wiring between Permaconn and Honeywell Vista 250BPT Alarm Panel:**

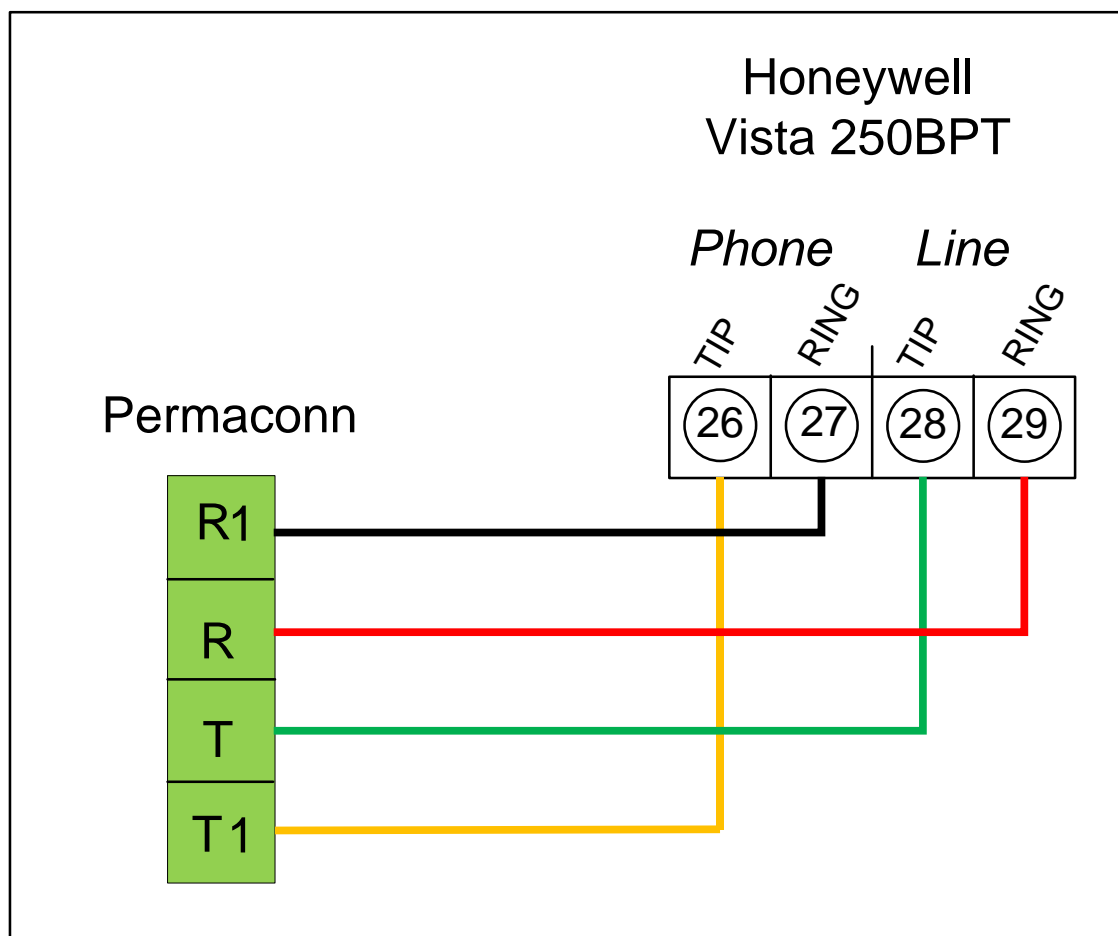



- Enter installer mode: 4 digit installer code (4140 default) + 8000  
NB: There is no field for option- DTMF/Pulse (v250BPT is DTMF)
- Press \*31\*: This clears any entries in the PABX field.
- Press \*32: Enter account number, e.g. acc. 1234 enter 01020304.  
If it's a multi-partition system:
  - 1) Press \*32: A prompt will appear to enter Partition number.
  - 2) Enter Partition number followed by the account number.
  - 3) For more Partition account number repeat step 1.
- Press \*33: Enter 8 digit primary phone number followed by the \* key.  
e.g. 12345678.
- Press \* 45: Primary format must be set to 1 (Contact ID).
- Press \* 51: Dual reporting must be set to 0.
- Press \* 56: AC 60/50Hz clock speed must be set to 1
- Press \* 84: Swinger Suppression must be set to 00
- Press \* 99 to exit program mode.
- Trigger a test report: 4 digit installer code (4140 default) + 5.
- Disarm system when finished: 4 digit installer code (4140 default) + 1.