

NESS Pro LX Alarm Panel

- ✓ **Panel Dialler wiring**
- ✓ **Panel Dialler programming**




Background:

Permaconn communicators have a terminal block for the connection of the female 611 fly lead (supplied). If the Alarm Panel also has a terminal block for PSTN connection, we recommend you use your own cable between the Alarm Panel dialler and the Permaconn communicator. This type of installation negates the use of the female 611 fly lead, decreasing your installation time. For four (4), six (6) and eight (8) pin RJ connectors, please refer to manufactures wiring diagram.

There are five (5) minimum requirements from the Alarm panel for successful communication:

- 1) Must have an eight (8) digit primary phone. E.g. 12345678.
- 2) A four (4) digit account number.
- 3) Must be Contact ID format.
- 4) Must be set for tone (DTMF) dialling.
- 5) Open / Close reporting, must be enabled for Pocket Secure App.

Dialler Lead wiring between Permaconn and NESS Pro LX Alarm Panel:

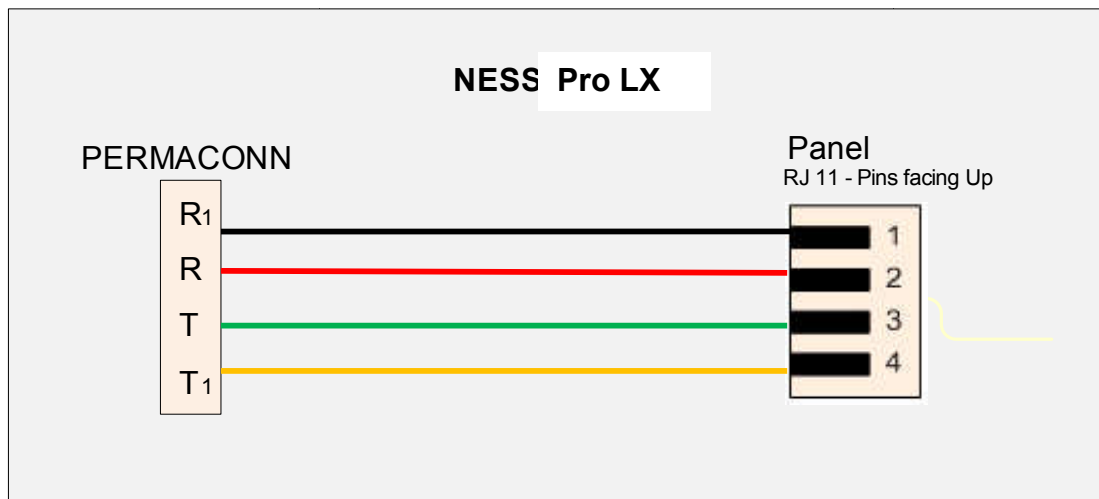

Programming the NESS Pro LX Alarm Panel for dialler operation:

Description	Location	Default
Enable Dialler	P82E: 2E	ON = Dialler Enabled (default)
Message format	P54E:	2 = Contact ID (Default is 1)
Account N# CS	P50E	0000
Admin	P750E	0000
Area 1	P751E	0000
Area 2	P752E	0000
Area 3	P753E	0000
Phone number 1	P51E Phone 1	Value 1 – 18 digits
Open/Close Report	P60E:	3 = Send all (Open/Close reports with account numbers for each area enabled).
Dialling Format	P55E:	3 = VF or DTMF (Default is 1)
Country Dial	P56E:	1 = Australia